

Step by Step cleaning instructions cont.....

Apply slight downwards pressure onto the device to ensure an even clean

DO NOT STEP OR STAND ON THE DEVICE WHEN IT IS OPERATING


Allow it to clean for a minimum of 3 minutes or until the pad is loaded with dirt.

Remove the device from the traveller and replace the pad, repeating procedures 8 – 15 as needed or until the traveller is clean

If there are any stains or marks still on the treads, use Ren Clean Restore sprayed directly onto the affected area and leave to soak for 5 – 10 minutes and repeat 8-15

Remove and clean the pads with a hosepipe and allow to dry. Also clean the device and trough. Remove safety signage when area safe & dry.

WHAT GREAT LOOKS LIKE

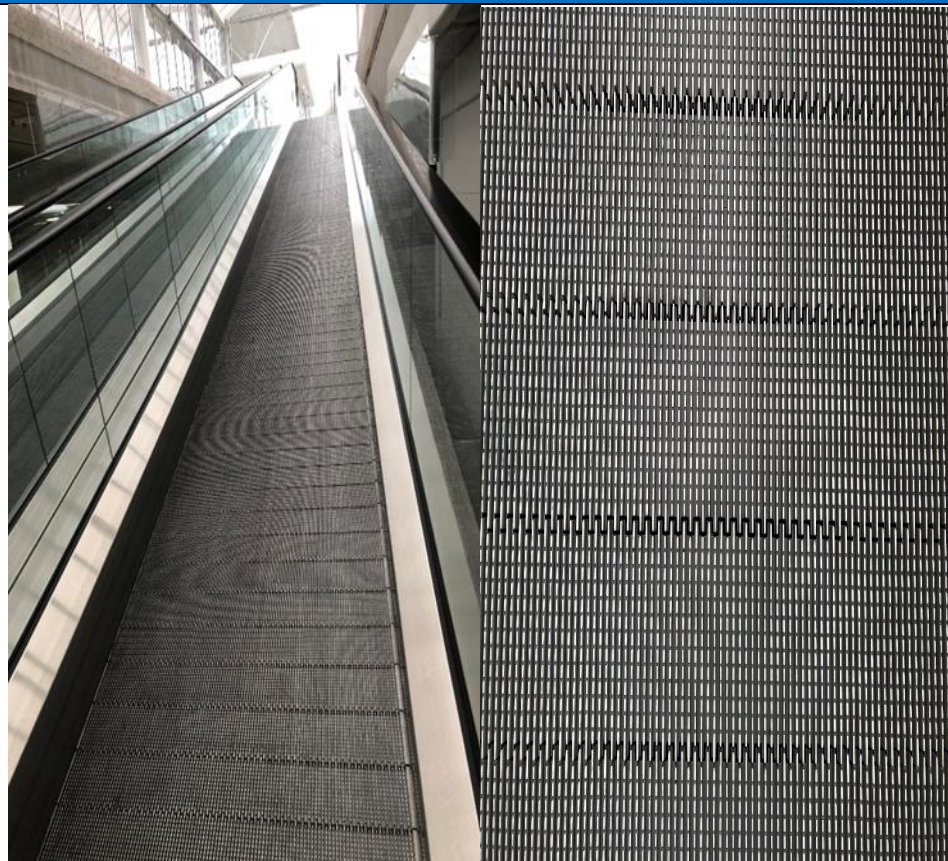

TASK 3 TRAVELLATOR TREAD CLEANING

RAMS: Refer to relevant RAMS in folder in office

MSDS Sheets: Refer to COSHH folders located in office & all cleaning cupboards

Equipment Required for task – use relevant colour coded equipment

REN Clean Travellator cleaning kit	Safety signage x 2
------------------------------------	--------------------

Chemicals required including dosing details

Tread Clean Solution	1 part to 10 parts water
----------------------	--------------------------

Restore	Do not dilute
---------	---------------

Location of Cleaning Task	PPE required for task
----------------------------------	------------------------------

Travellators	Gloves
--------------	--------

	Goggles for dilution
--	----------------------

	Mask for dilution
--	-------------------

Step by Step cleaning instructions



PLEASE WASH YOUR HANDS BEFORE & AFTER YOUR TASK

Place safety signage in position at both top and bottom of traveller

Ensure lighting is adequate to complete the task

Make sure the travellers are running towards you

Pre-spray the treads with Tread Clean chemical and allow to soak for 5 – 10 minutes

Place the saturation trough on to a safe flat surface

Mount the pad onto the device with the white side of the pad at the back, making sure the teeth are straight

Pour the Tread Clean chemical into the saturation trough, filling to the white line

Place the device with a pad on into the trough and with a firm pumping action compress the pad several time until the chemical has been absorbed

Make sure the device is properly seated with the pads teeth and the treads aligned